

Wall Mounted Occupancy Detector

Features

- Corner or flat wall mounted
 - 24Vac/dc supply
 - Compatible with a broad range of equipment
 - Low voltage loads can be switched directly without the need for interposing relays

Specification

Occupancy Sensor	Passive Infra-Red Detector
Field of view	90°
Coverage	18 metres
Туре	Class 21
Supply Voltage	12 - 24Vac/Vdc
Switching Capacity	6(2)A @ 24V
Electrical Connections	+24V, 0V, Relay - Common, NO, NC
Dimensions	See Page 3
Installation height	2 to 3m above the floor
Temperature	-10 to +40C
Humidity	90%RH non-condensing
Material	Flame retardant ABS, polypropylene
Conformity	EMC

Product Codes

OC-W-LV

Wall mount PIR occupancy detector



Technical Overview

The OC-W-LV is a Passive Infra-Red detector for monitoring occupation through moving body heat. Detection of occupancy causes the internal SPDT relay to activate.

The volt free contacts in the OC-W-LV ensure compatibility with a vast array of equipment.


Please note that the relay in this unit is rated for low voltage use only.

Installation

The OC-W-LV should be sited so that the occupants of the room fall inside the detection pattern shown on page 3 and in accordance with the following guidelines.

- Avoid direct sunlight entering the sensor.
- Do not site within 1m of forced air heating or ventilation.
- Do not site within 1m of any lighting.
- Do not fix to a vibrating surface.

Connections

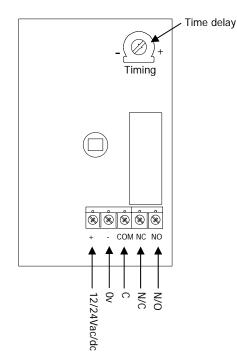

The electrical connections must be made before attaching it to the wall bracket or directly to the wall.


Setting The Time Delay

Timing is adjustable between 10s and 30min using the timing adjuster on the PCB.

Mounting


Bracket Mounting

The recommended fixing of the OC-W-LV to a flat wall or corner is using the bracket included with the unit. The bracket is secured using screws (not supplied) and then the housing is simply attached as shown in the diagram below.

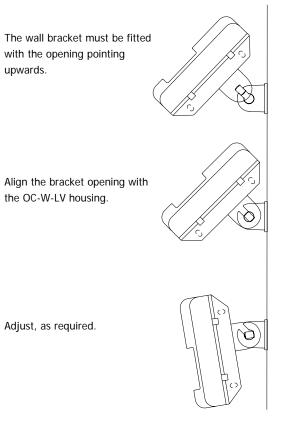


Direct Mounting

Direct mounting to either a corner or flat wall is achieved using knock-out's in the back cover. The front cover is removed by unclipping it which will reveal a number of knockouts on the rear part of the enclosure. These are simply punched or drilled out and the rear section is then fixed directly to the surface. The front cover can then be clipped back into place.

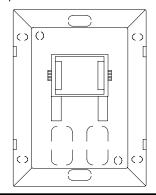



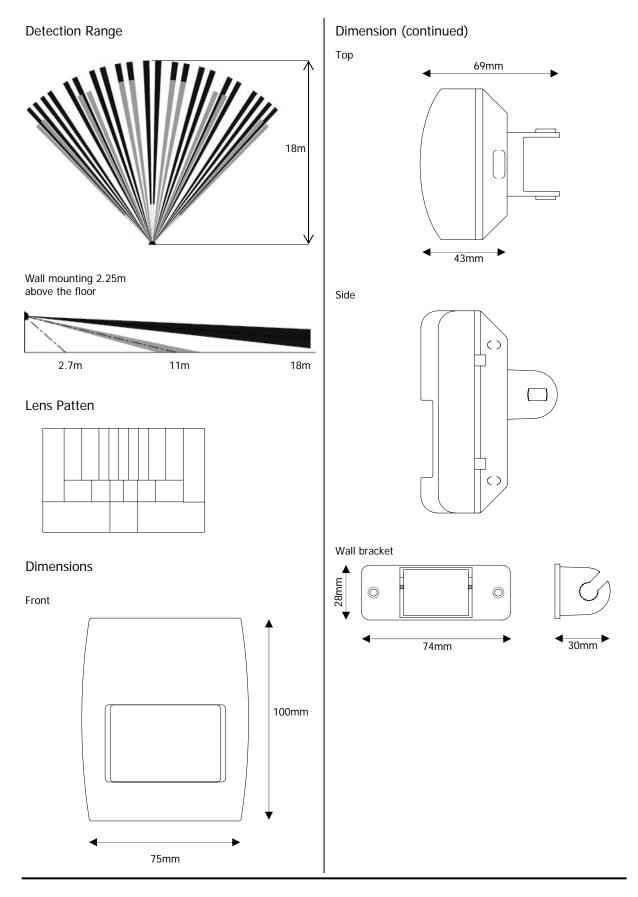

UK Sales Tel: 0845 345 7253

Page 3 of 3

International Tel: +44 1732 861225

For the latest information and product updates, register at www.sontay.com

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense resulting from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.