

IO-RM2 Issue: 5.2 Date Of Issue: 23/12/2010 © 2010 Sontay Limited. All rights reserved.

2-Stage Relay Module

Features

- Fault finding LED indication
- Relay status LED indication
- Link selectable raise/lower, hi/low or binary modes
- On/Off/Auto links for ease of commissioning
- DIN Rail mounting

Specification

Input signal	0-10Vdc 1mA min. into 22kΩ		
	impedance		
Output contacts	8A at 230Vac (resistive load)		
Power supply:			
	24Vac ±15% @ 50Hz or		
	24Vdc +15% -6%, 65mA max.		
Hysteresis	±0.2Vdc about switching points		
Operating modes:			
	Hi/Lo		
	1 raise/lower pair		
	Binary		
LED indication:			
	Supply OK		
	Supply voltage low		
	Supply voltage high		
	Relay Status		
	Hi input voltage		
	Incorrect input mode jumper		
	selection		
	Low input voltage (only in 2-10Vdc mode)		
Manual override	On/Off/Auto jumper selectable		
Electrical terminals	Rising cage connectors for 0.5-		
	2.5mm ² cable		
Ambient range:			
Temperature	-10°C to +40°C		
RH	0-80% non-condensing		
Dimensions	H72mm x W49.5mm x D55mm		
Country of origin	UK		

Product Codes

IO-RM2

Analogue to digital converter. It converts a 0-10Vdc input and opens or closes up to 2 relays.



Warning!

When installed, the output relay contacts may carry 240Vac. Special care must be taken to isolate the switched voltages prior to any work being undertaken.





Technical Overview


The IO-RM2 is Intended for use with BMS controllers to convert an analogue control output to a raise/lower, high/ low or binary relay output pair. Applications include the control of raise/ lower valve and damper actuators, and pump changeover. LEDs indicate correct operation and Hand/Off/Auto jumpers ease commissioning. Low current draw from 0-10Vdc controller output means that the IO-RM2 can work successfully with most BEMS controllers.

Installation

- 1. The IO-RM2 should only be installed by a competent, suitably trained technician, experienced in installation with hazardous voltages. (>50Vac & <1000Vac or >75Vdc & 1500Vdc)
- 2. Ensure that all power is disconnected before carrying out any work on the IO-RM2.
- 3. Maximum cable is 2.5mm², care must be taken not to over tighten terminals.
- 4. When mounting the IO-RM2 care should be taken not to stress the PCB when fitting to the DIN rail. If it is necessary remove the module from the DIN rail, be sure to use a flat bladed screwdriver to release the DIN clips.
- 5. The IO-RM2 is designed to operate from a 24Vac/dc supply (so that power can be drawn from a 24Vac transformer used for other purposes if a 24Vdc supply is not available). In either case one side of the supply is common to the signal ground from the BEMS controller.
- 6. The relay outputs are single Pole Change Over (SPCO) so they can be wired as Normally Open (NO) or Normally Closed (NC).
- 7. The 0-10Vdc signal input requires a minimum of 1mA to operate.


Jumper Settings

Function link:

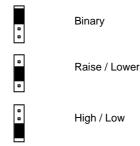


Jumper Settings (continued)



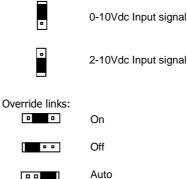

Connections

00

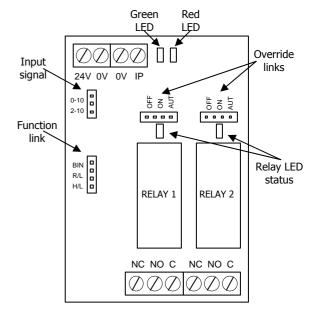

Switching Sequences

Binary:

Input Voltage	Nominal	Relay 1	Relay 2
0Vdc - 3Vdc	0Vdc	OFF	OFF
3Vdc - 5.5Vdc	4Vdc	ON	OFF
5.5Vdc - 8Vdc	7Vdc	OFF	ON
8Vdc - 10Vdc	10Vdc	ON	ON

Raise / Lower:

Input Voltage	Nominal	Relay 1	Relay 2
0Vdc - 3Vdc	0Vdc	OFF	OFF
3Vdc - 5.5Vdc	4Vdc	ON	OFF
5.5Vdc - 8Vdc	7Vdc	OFF	OFF
8Vdc - 10Vdc	10Vdc	OFF	ON



Switching Sequences (continued)

High / Low:

Input Voltage	Nominal	Relay 1	Relay 2
0Vdc - 3Vdc	0Vdc	OFF	OFF
3Vdc - 7.5Vdc	5Vdc	ON	OFF
7.5Vdc - 10Vdc	10Vdc	ON	ON

LED Status

Power supply

Normal:

The green LED indicates the supply power condition. If power supply is normal (between 22V and 40V \pm 0.2V hysteresis) the green LED is ON continuously, showing that the IO-RM2 is powered correctly.

Low Supply Voltage:

If power supply falls below about 21.8V the green LED double flashes twice a second;

*_*____*_*___*_*_*__*_*_*_*

The low power condition clears at about 22.0V. The relays behave as normal.

High Supply Voltage:

If the power supply is above 40V the green LED flashes 6 times a second;

*_*_*_*_*_*

All the relays are switched off (except when forced ON by jumper settings) as excessive voltage might overload the voltage regulator.

The relays are switched off:

- For 2 seconds after power-up
- When the supply is greater than 40V
- For 2 seconds after any over 40V condition clears

This prevents the relays from switching on and off during power-up or power failure with an over voltage power supply.

LED Status (continued)

Control Input Voltage

The red LED indicates input voltage condition Normally the red LED is off

High Input:

If the input voltage exceeds 11V, $\pm 0.2V$ hysteresis, the red LED goes on continuously. The relays behave as if 10Vdc were applied. The input voltage should settle on one 'voltage band'. Voltage is deemed to have settled after it has been within one band for 250ms. If it has not settled for 500ms it is deemed to be unstable. If it is unstable the red LED flashes 6 times a second:

*_*_*_*_*_*

The relay outputs remain at their last settled value.

Mode Select Error:

If the mode select jumper is missing or there is an inconsistent setting (such as connecting 2 jumpers) then this is an error. The red LED does triple flashes:

*_*_*__*_*_*_*_*_*_*_*_*_*_*_*_*

The relays are switched off.

Low Input:

If the input voltage goes below 1.5Vdc, ± 0.2 Vdc hysteresis, when 2Vdc to 10Vdc input mode is selected then the red LED does double flashes:

*_*____*_*_*_*_*_*_*_*

Input mode

2Vdc to 10Vdc input mode:

This works the same as the normal 0-10Vdc input mode except that the input voltages are taken from 20% to 100% of the full range, and are consequently more closely spaced. The bottom 20% is regarded as an error (see LED indications), and will cause all relays to be off (unless jumpers force them on). Hysteresis around changeover voltages are 80% of the normal 0.2Vdc = 0.16Vdc.

UK Sales Tel: 0845 345 7253

Page 3 of 3

International Tel: +44 1732 861225

For the latest information and product updates, register at www.sontay.com

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense resulting from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.