Duct Mounting Battery Powered Radio Temperature Sensors



Features

- Up to 5 years battery life
- High quality external whip antenna
- Encrypted data transmission
- Configurable parameters

Specification

Sontay

Product Codes

 $\ensuremath{\mathsf{RF-RS-T-522}}$ - Battery powered radio duct temperature sensor

Radio Output:	
Frequency	2.4GHz
16 channels, automatically selected	
Direct-sequence spread spectrum	
Compliance	IEEE 802.15.4-2006
Aerial Characteristics	
Gain	2.0dBi
VSWR	<2:1
Data Encryption:	AES 128
Power Output:	0dBm
Accuracy:	
Temperature	±0.3°C
Battery Type:	3.6V 2/3 A Li-SOCI ₂ ,
	non-rechargeable
Battery Life:	>3 years
	(depending on configuration)
Probe:	
Material	Brass
Dimensions	150mm x 6mm dia.
Housing:	
Material	ABS (flame retardant type VO)
Dimensions	55mm x 90mm dia.
Mounting holes	4mm spaced 85mm apart
Protection:	IP65
Environmental:	
Operating:	
Temperature	-10°C to +50°C
RH	0 to 90%, non-condensing
Storage:	
Temperature	-10°C to +80°C
RH	0 to 90%, non-condensing
Country of origin:	UK



Technical Overview

The radio RH&T sensors are used in conjunction with the Sontay[®] **RF-RX20** or **RF-RX40** receiver units, and if required (depending on installation topography), Sontay[®] **RF-RR** series of router radio sensors.

Routers are used to route signals from battery powered nodes and other routers to the receiver module, where the signal strength of a direct path is not sufficient for reliable communications.

Data is transmitted back to the receiver at configurable time intervals, or on a configurable change in measured value. Each sensor retains these configurations if the battery becomes discharged or requires replacement.

The sensors, routers and receiver automatically select which of the 16 transmission channels available gives the best radio network performance, taking into account both signal strength and interference levels from adjacent channels and equipment (such as Wi-Fi etc.) The sensors and routers automatically find the best path back to the receiver, which may be directly to the receiver or via "parent" routers.

NB Each router can support a maximum of 16 "children", a maximum of 8 of which can be battery powered "end devices" and a maximum of which can be 8 routers. Consideration should be given on network planning for redundancy in case of router failure or damage.

Labels

Labels are available in plain, pre-printed or customer print types and a choice of either dark grey or white.

Aerial Orientation

For best results, ensure the main body of the aerial is vertical.



Installation

- 1. Remove all packaging from the sensor
- 2. Note the MAC address printed on the affixed label and note where this MAC address is installed.
- Remove the lid by twisting to separating from the main body and install the Li-SOCl₂ 2/3 A battery, observing the correct polarity.
- 4. Mount the sensor in the required position (this will have been determined by the site survey tool, (see the quick start guide and manual), where dust & contaminants are at a minimum (i.e. after filters etc.) and which will give a representative sample of the prevailing air condition.
- 5. Drill two holes at 85mm centres and a 6mm diameter hole centrally between them for the duct probe. Fix the IP65 housing to the duct with appropriate screws, making sure to align the holes in the probe so they point into the air flow. The housing is designed to make it easy for an electric screwdriver to be used if desired.
- 6. To power on the unit, fit J400.
- Ensure, at a minimum, that all routers and the receiver on the radio network are powered on, and allow about 5 minutes for the network to autocommission before attempting to read values or make configuration changes.

Battery Fitting and Replacement

The current battery level of a sensor can be monitored using the CMS software connected to the receiver. When a battery is first installed, or when it is replaced, observe the correct polarity. **Fitting the battery incorrectly may result in permanent damage to the sensor**. Remove the power jumper J400 prior to removing a battery. After fitting a battery, replace the power jumper while pressing the reset button. This resets the hours run counter for the battery.

NB Lithium-Thionyl Chloride batteries are not rechargeable, and should be stored in a clean, cool (not exceeding $+30^{\circ}$ C), dry and ventilated area.

Disposal of Batteries - Warning! Fire, Explosion and Burn Hazard.

Do not recharge, short-circuit, crush, disassemble, heat above $100^{\circ}C$ (212°F), incinerate, or expose the battery contents to water. Do not solder directly to the cell.

All batteries must be disposed of in accordance with EC Directive 2006/66/EC, amended by EU Directive 2008/12/EC.

UK Sales Tel: 0845 345 7253

Page 2 of 2

International Tel: +44 1732 861225

For the latest information and product updates, register at www.sontay.com

Whilst every effort has been made to ensure the accuracy of this specification, Sontay[®] cannot accept responsibility for damage, injury, loss or expense resulting from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.