

±2%

±3%

±0.3°C

< 2% RH p.a.

0 to 100%RH

-20 to +50°C

4-20mA or 0-10Vdc

(others on request -TR)

-40 to +60°C (optional)

-20 to +269kJ/kg (optional)

Thermistor option for temp. output

20 - 35Vdc for 500 Ω loop resistance

RH-OS Issue: 5.4 Date Of Issue: 21/06/2010 © 2010 Sontay Limited. All rights reserved.

Outside RH & T Sensors

Features

- Radiation shield
- High stability and reliability
- No loss of accuracy up to 100% RH
- Built-in circuitry diagnostics
- ±2% and ±3% Accuracy versions
- 4-20mA or 0-10Vdc outputs (link selectable)
- Direct thermistor temperature options available

Product Codes

RH-OS01

Outside RH & T transmitter, ±2% accuracy

RH-OS01-T

Outside RH & T transmitter, $\pm 2\%$ accuracy with direct temperature

RH-OS02

Outside RH & T transmitter, ±3% accuracy

RH-OS02-T

Outside RH & T transmitter, $\pm 3\%$ accuracy with direct temperature

-EN

Enthalpy & dewpoint outputs (Only available with the RH-OS01)

-TR

Custom temperature range (available on request)

-Т

Direct output temperature element

mermistor types:					
A (10K3A1)	N (3K3A1)				
B (10K4A1)	P (30K6A1)				
C (20K6A1)	Q (50K6A1				
H (SAT1)	S (SAT2)				
K (STA1)	T (SAT3)				
L (TAC1)	W (SIE1)				
M (2.2K3A1)	Y (STA2)				
Z (10K NTC)					
Platinum types:					
D (PT100a)					
E (PT1000a)					
Nickel types:					
F (NI1000a)					
G (NI1000a/TCR (LAN1))					

Specification

RH accuracy:

RH-OS01

Sontay

RH-OS02 Long term stability Temp. accuracy Outputs Output ranges: RH Temperature Enthalpy Dewpoint Power supply: 4-20mA 0-10Vdc

Connections Dimensions: Housing Probe Shield Materials: Housing Probe End cap

Ambient range

Country of origin

14 to 26Vac (4.7KΩ min) 0.5 - 2.5mm² cable 55 x 90mm dia. 215 x 19mm dia. 200 x 118mm dia. ABS PVC Delrin -10 to +50°C

EU

17 - 34Vdc, or



Technical Overview

The RH-OS outside mounted humidity & temperature sensors offer the latest technology for high accuracy RH measurement.

The sensor is supplied with a radiation shield, this provides the necessary protection of solar radiation and precipitation. Units can be ordered with an optional direct resistive temperature output (where this option is required, the type of temperature element MUST be specified at the time of ordering). The RH-OS01 is also available with additional outputs for enthalpy and dewpoint (RH-OS01-EN).


Non-standard temperature output ranges can be specified at time of order.

Installation

Antistatic precautions must be observed when handling these sensors. The PCB contains circuitry that can be damaged by static discharge.

- 1. Fit to a suitable mast using the U bolts supplied.
- 2. When mounting the sensor outside it is recommended that a rain loop be placed in the cable before entry into the sensor.
- 3. Remove the front cover by twisting the lid and separating from the main body.
- 4. Feed the cable through the waterproof gland and terminate the cores at the terminal block. Leaving some slack inside the unit, tighten the cable gland onto the cable to ensure water tightness.
- 5. Replace the lid after the electrical connections have been made.
- 6. Ensure that the supply voltage is within the specified tolerances.
- 7. Allow 3 minutes before checking functionality.
- 8. Allow 30 minutes before carrying out precommissioning checks.


Note Standard units are factory set for 4-20mA outputs.

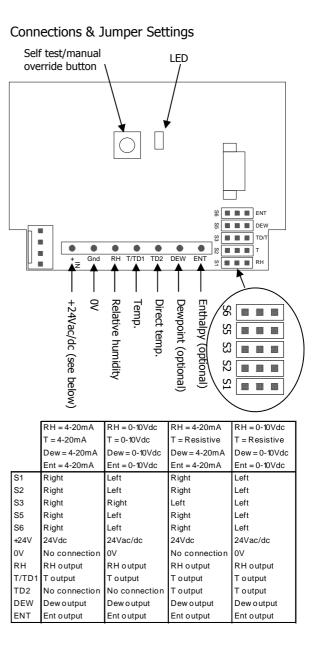

Note Enthalpy & dewpoint outputs are only available with the RH-OS01.



Connection Examples

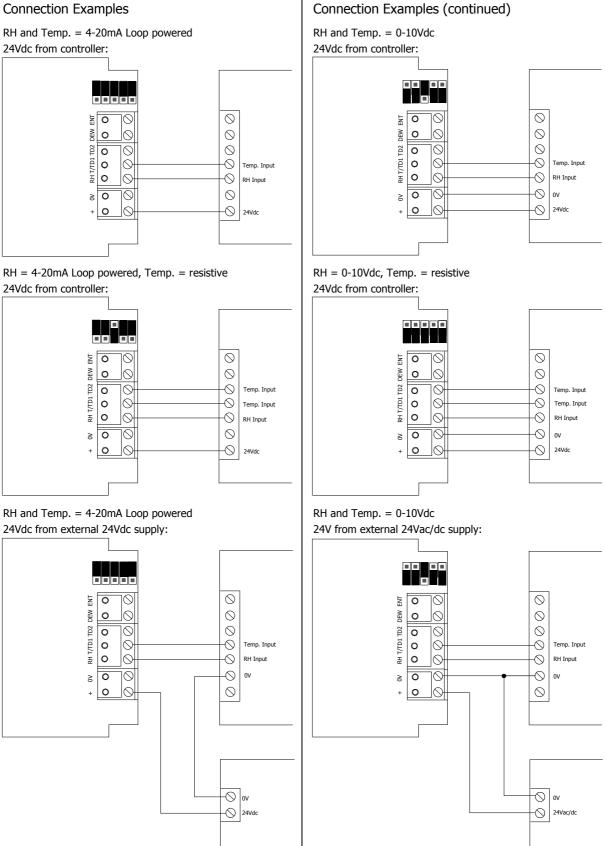



Self-Test & Manual Override Mode

The outputs of the RH-OS can be manually overridden to one of 3 values by pressing the PCB mounted button. When this button is pressed once, the outputs will change to 0% of the output's range, when pressed again the outputs will change to 50% of the output's range and when pressed a third time will change the outputs to 100% of the outputs range. Pressing again will return the outputs to automatic control.

Example:

- First Press RH output falls to 0% and temperature output falls to -20°C, LED flashes slowly
- Second Press RH output rises to 50% and temperature output rises to +15°C, LED flashes slowly
- Third Press RH output rises to 100% and temperature output rises to +50°C, LED flashes slowly
- Fourth Press RH and temperature outputs revert to automatic levels. The LED should be permanently on

Failure Mode

If the sensor element assembly fails, the outputs will change to the following fixed default values and the LED will flash rapidly;

RH = 0% Temperature = 21°C Dewpoint (optional) = 10°C Enthalpy (optional) = 50 kJ/kg

NB – When using the RH-OS01-EN enthalpy and dewpoint version in 4-20mA loop powered output mode, at least 2 of the loops must be powered before the unit will operate correctly.

Warning

Relative humidity transmitters are sensitive electronic devices and care should be taken at all times to ensure that they are not exposed to extreme ambient conditions or incorrect electrical connection. Transmitters should not be exposed to direct moisture contact (e.g. rain) and saturation of the transmitter at very high humidity should be avoided wherever possible.

Commissioning

To perform an accurate comparison between a transmitter output and a portable reference, it is essential that the two probes are held adjacent for a minimum of 30 minutes in a stable RH environment. Only in this way can speed of response and temperature factors be eliminated. It is not uncommon for test instruments and transmitters to disagree by 10% RH or more when site measurements are taken incorrectly. 'Slings' or other mechanical hygrometer should **not** be used as a reference.

Trend scaling

IQ1xx and early IQ2x series (without type 5, characterise),

4-20mA		(0 to 1000/ DU)			
(-20 to +50°C)	-125	(0 to 100%RH)	-150		
Brange	-125 50	Brange	100		
Trange	50	Trange	100		
Upper	-20	Upper	0		
Lower	-20 3	Lower	0 3		
Exp	3	Exp	3		
4-20mA					
(Dewpoint)		(Enthalpy)			
Brange	-190	Brange	-453.5		
Trange	60	Trange	269		
Upper	60	Upper	269		
Lower	-40	Lower	-20		
Exp	3	Exp	4		
0-10Vdc					
(-20 to +50°C)		(0 to 100%RH)			
Brange	-90	Brange	-100		
Trange	50	Trange	100		
Upper	50	Upper	100		
Lower	-20	Lower	0		
Exp	3	Exp	3		
r		F			
0-10Vdc					
(Dewpoint)		(Enthalpy)			
Brange	-140	Brange	-309		
Trange	60	Trange	269		
Upper	60	Upper	269		
Lower	-40	Lower	-20		
Exp	3	Exp	3		



(Enthaply)

Points used

Upper

Lower

Exp

I1

01

I2

02

269

-20

3

2

0

-20

10

269

Trend Scaling (continued)

60

-40

3

2

0

-40

10

60

0-10Vdc (Dewpoint)

Upper

Lower

Points used

Exp

I1

01

I2

02

Q2xx and early IQ3 series (with type 5, characterise),

Trend Scaling (continued)

IQ1xx and early IQ2x series (without type 5, characterise),

Thermistor -A (10K3A1) (Scaling Type 2),							
Brange	-10						
Trange	40						
F	8.47						
G	7.42						
Н	6.11						
I	4.73						
J	3.48						

Q2xx and early IQ3 series (with type 5, characterise),

C	,	,, ,	,,				
4-20mA			Thermistor -A (10K3A1), -10 to +40°C				
(-20 to +50°C) (0 to 100%RH)							
Upper	, 50	Upper	100		Resista	ance input	Temp. Output
Lower	-20	Lower	0	1	5.32		40.0
Ехр	3	Exp	3	2	5.89		37.5
Points used	2	Points used	2	3	6.53		35.0
I1	4	I1	4	4	7.24		32.5
01	-20	01	0	5	8.05		30.0
12	20	12	20	6	8.96		27.5
02	50	02	100	7	10.00		25.0
				8	11.16		22.5
4-20mA				9	12.49		20.0
(Dewpoint)		(Enthalpy)		10	14.00		17.5
Upper	60	Upper	269	11	15.71		15.0
Lower	-40	Lower	-20	12	17.67		12.5
Exp	3	Exp	3	13	19.90		10.0
Points used	2	Points used	2	14	22.47		7.5
I1	4	I1	4	15	25.40		5.0
01	-40	01	-20	16	28.79		2.5
I2	20	I2	20	17	32.66		0.0
02	60	02	269	18	37.18		-2.5
				19	42.35		-5.0
0-10Vdc				20	55.30		-10.0
(-20 to +50°C	2)	(0 to 100%RH)				
Upper	50	Upper	100	Upper		40.0	
Lower	-20	Lower	0	Lower		-10.0	
Exp	3	Exp	3	Exp		3	
Points used	2	Points used	2	Points		20	
I1	0	I1	0	Input type		3(kohms)	
01	-20	01	0				
I2	10	I2	10				
02	50	02	100				
				1			

UK Sales Tel: 0845 345 7253

Page 5 of 5

International Tel: +44 1732 861225

For the latest information and product updates, register at www.sontay.com

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense resulting from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.