

Wall Mounting Router Radio RH&T Sensors

Features



- High power output
- High quality external whip antenna
- Encrypted data transmission
- Configurable parameters

Specification

Radio Output:

Frequency 2.4GHz
16 channels, automatically selected
Direct-sequence spread spectrum
Compliance IEEE 802.15.4-2006

Aerial Characteristics

Gain 2.0dBi
VSWR <2:1

Data Encryption: AES 128

Power Output: +10dBm

Accuracy:

Temperature $\pm 0.3^{\circ}\text{C}$
RH $\pm 3\%$ RH

Power Supply: 24Vac/dc

Dimensions:

Housing 55 x 90mm dia.
Probe 90 x 19mm dia.

Materials:

Housing ABS
Probe PVC
End cap Delrin

Environmental:

Operating:

Temperature -10°C to $+50^{\circ}\text{C}$
RH 0 to 90%, non-condensing

Storage:

Temperature -10°C to $+80^{\circ}\text{C}$
RH 0 to 90%, non-condensing

Country of origin: UK

Product Codes

RF-RR-R-531 - Wall mounting router radio RH&T sensor

Technical Overview

The radio RH&T sensors are used in conjunction with the Sontay **RF-RX20** or **RF-RX40** receiver units, and if required (depending on installation topography), Sontay **RF-RST** and **RF-RSR** series of battery powered radio sensors.

Routers are used to route signals from battery powered nodes and other routers to the receiver module, where the signal strength of a direct path is not sufficient for reliable communications.

Data is transmitted back to the receiver at configurable time intervals, or on a configurable change in measured value. Each sensor retains these configurations if the battery becomes discharged or requires replacement.

The sensors, routers and receiver automatically select which of the 16 transmission channels available gives the best radio network performance, taking into account both signal strength and interference levels from adjacent channels and equipment (such as Wi-Fi etc.) The sensors and routers automatically find the best path back to the receiver, which may be directly to the receiver or via "parent" routers.


NB Each router can support a maximum of 16 "children", a maximum of 8 of which can be battery powered "end devices" and a maximum of which can be 8 routers. Consideration should be given on network planning for redundancy in case of router failure or damage.

Labels

Labels are available in plain, pre-printed or customer print types and a choice of either dark grey or white.

Aerial Orientation

For best results ensure that the main body of the aerial is vertical.

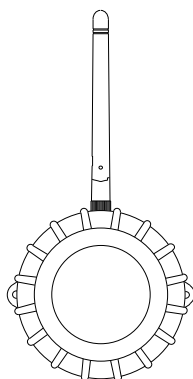

Installation

1. Remove all packaging from the sensor
2. Note the MAC address printed on the affixed label and note where this MAC address is installed.
3. Mount the sensor in the required position (this will have been determined by the site survey tool, (see the quick start guide and manual).
4. Make sure to align the holes in the probe so that they point into the air flow, not at right angles to it.
5. It is recommended that the unit be mounted with the cable entry at the bottom.
6. If the cable is fed from above then into the cable gland at the bottom, it is recommended that a rain loop be placed in the cable before entry into the sensor.
7. Remove the lid by twisting and separating from the main body.
8. Using the base of the housing as a template mark the hole centres. Drill two pilot holes at 85mm centres in the surface to which the sensor is to be mounted and a 19mm diameter hole centrally between them for the duct probe
9. Fix the sensor to the duct using appropriate screws.
10. The housing is designed to make it easy for an electrical screwdriver to be used if desired.
11. Feed the cable through the waterproof gland and terminate at the terminal block. Leaving some slack inside the housing, tighten the cable gland onto the cable to ensure water tightness.
12. Observe correct polarity if using a 24Vdc power supply.
13. To power on the unit, fit J200.
14. Replace the lid after the electrical connections have been made.
15. Allow 3 minutes before checking functionality.
16. Allow 30 minutes before carrying out pre-commissioning checks.
17. Ensure, at a minimum, that all routers and the receiver on the radio network are powered on, and allow about 5 minutes for the network to auto-commission before attempting to read values or make configuration changes.