

Technical data sheet

Linear actuators for adjusting air dampers and slide valves in ventilation and air conditioning systems in buildings

- For air dampers up to approx. 3 m²
- Actuating force 450 N
- Nominal voltage AC 100 ... 240 V
- Control: Open-close or 3-point
- Lenght of stroke up to max. 100, 200 or 300 mm, adjustable in steps of 20 mm



Overview of types

Туре	Stroke	Weight
SH230A100	Up to max. 100 mm, adjustable in steps of 20 mm	1.08 kg
SH230A200	Up to max. 200 mm, adjustable in steps of 20 mm	1.15 kg
SH230A300	Up to max. 300 mm, adjustable in steps of 20 mm	1.22 kg

Technical data

	ominal voltage ower supply range		AC 100 240 V, 50/60 Hz
Po	ower supply range		
			AC 85 265 V
Po	ower consumption	In operation	2.5 W @ nominal force
		At rest	0.6 W
_		For wire sizing	6 VA
<u>C</u>	onnection		Cable 1 m, 3 x 0.75 mm ²
Functional data Ad	ctuating force		450 N @ nominal voltage
St	troke		See «Overview of types»
Di	irection of stroke		Reversible with switch 1∓ resp. 0±
Ru	unning time		150 s / 100 mm
Sc	ound power level		<50 dB (A)
Safety Pr	rotection class		II totally insulated
De	egree of protection		IP54 in any mounting position
_			NEMA 2, UL Enclosure Type 2
E	MC		CE according to 2004/108/EC
Lo	ow-voltage directive		CE according to 2006/95/EC
Ce	ertification		cULus according to UL 60730-1A and UL 60730-2-14
			and CAN/CSA E60730-1:02
_			Certified to IEC/EN 60730-1 and IEC/EN 60730-2-14
	lode of operation		Туре 1
Ra	ated impulse voltage	е	4 kV
Co	ontrol pollution degr	ree	3
Ar	mbient temperature	range	–30 +50 °C
No	on-operating tempe	rature	-40 +80°C
Ar	mbient humidity ran	ge	95% r.H., non-condensating
M	laintenance	-	Maintenance-free
Dimensions / Weight Di	imensions		See «Dimensions» on page 3
W	/eight		See «Overview of types»




Safety notes		
	 The actuator is not allowed to be used outside the specified aircraft or in any other airborne means of transport. Caution: Power supply voltage ! It may only be installed by suitably trained personnel. Any leissued by authorities must be observed during assembly. The device may only be opened at the manufacturer's site. I can be replaced or repaired by the user. The rotary supports and coupling pieces available as access lateral forces are likely. In addition, the actuator must not be It must remain movable via the rotary support (refer to «Asselite the linear actuator is exposed to severely contaminated at precautions must be taken on the system side. Excessive d prevent the gear rack from being extended and retracted cool If not installed horizontally, the gear disengagement pushbot there is no pressure on the gear rod. To calculate the actuating force required for air dampers an supplied by the damper manufacturers concerning the surfainstallation site and the air flow conditions must be observed. If a rotary support and/or coupling piece is used, losses in the expected. 	egal regulations or regulations It does not contain any parts that sories must always be used if e tightly bolted to the application. sembly notes»). tmosphere, appropriate eposits of dust, soot etc. can rrectly. utton may only be actuated when d slide valves, the specifications ace, cross section, design, ed. the actuation force losses are to nd is not allowed to be disposed
Product features		
Manual override	Manual override with push-button possible (the gear is disenga pressed or remains locked).	aged for as long as the button is
Adjustable stroke	The stroke of the gear rack can be adjusted on both sides in in mechanical end stops.	crements of 20 mm by means of
High functional reliability	The actuator is overload-proof, requires no limit switches and a stop is reached.	automatically stops when the end
Accessories		
	Description	Data sheet

Mechanical	accessories
------------	-------------

	Description	Data sheet
S	Rotary support to compensate lateral forces Z-DS1	T2 - Z-SHA
	Coupling piece Z-KS1	T2 - Z-SHA
	Mechanical limiter set Z-AS1	T2 - Z-SHA


Electrical installation

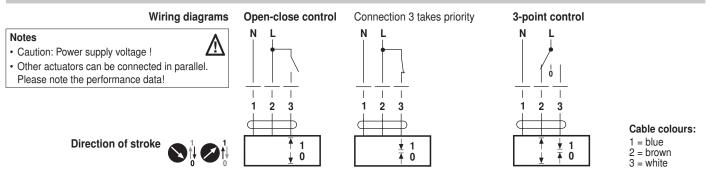



Dimensions [mm]



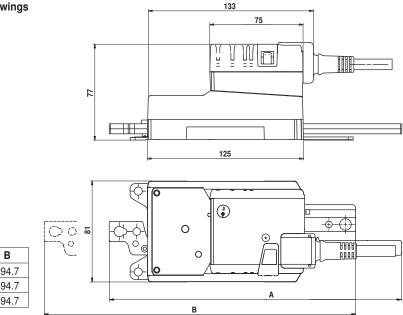

Туре	Max. Stroke	Α	В
SH230A100	100	233.5	294.7
SH230A200	200	333.5	394.7
SH230A300	300	433.5	494.7

Assembly notes

Application without transverse forces

Application with transverse forces

Caution

If a rotary support and/or coupling piece is used, losses in the actuation force are to be expected.



Stroke limitation

The linear actuator is screwed directly to the housing at three points. Afterwards, the head of the gear rod is fastened to the moving part of the ventilation application (e.g. damper or slide valve).

The coupling piece with the internal thread (Z-KS1) is connected to the head of the gear rod. The rotary support (Z-DS1) is screwed to the ventilation application.


Afterwards, the linear actuator is screwed to the previously mounted rotary support with the enclosed screw. Afterwards, the coupling piece, which is mounted to the head of the gear rod, is attached to the moving part of the ventilation application (e.g. damper or slide valve). The transverse forces can be compensated for to a certain limit with the rotary support and/or

coupling piece. The maximum permissible swivel angle of the rotary support and coupling piece is 10° , laterally and upwards.

If the stroke limitations are used on the gear rod, the mechanical working range can be exploited from an extension length of 20 mm.




70749-00031.C

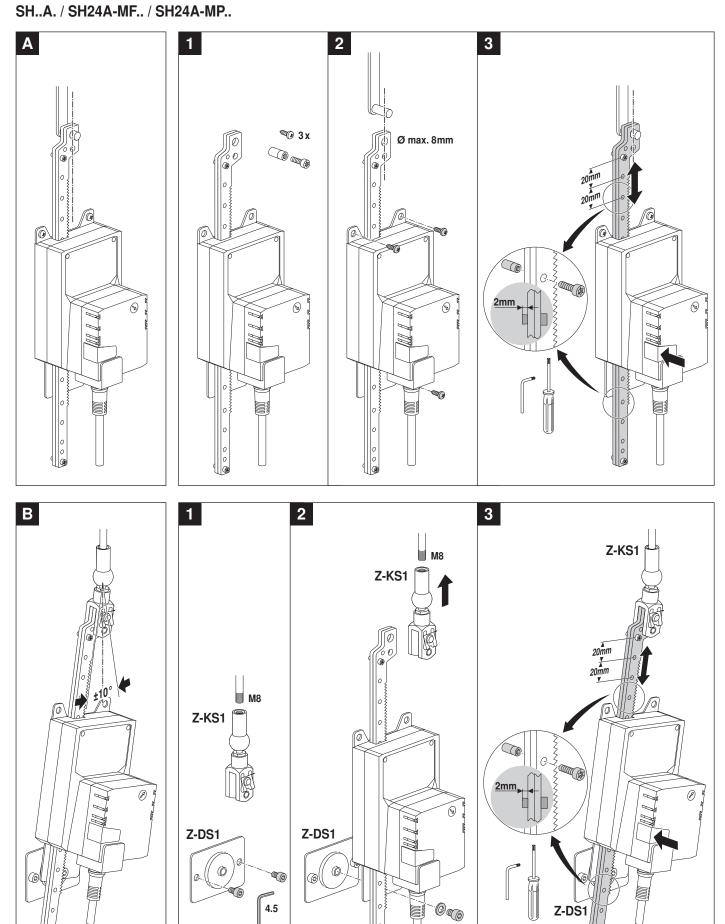

5.5




SH24A-SR. / SH230ASR..

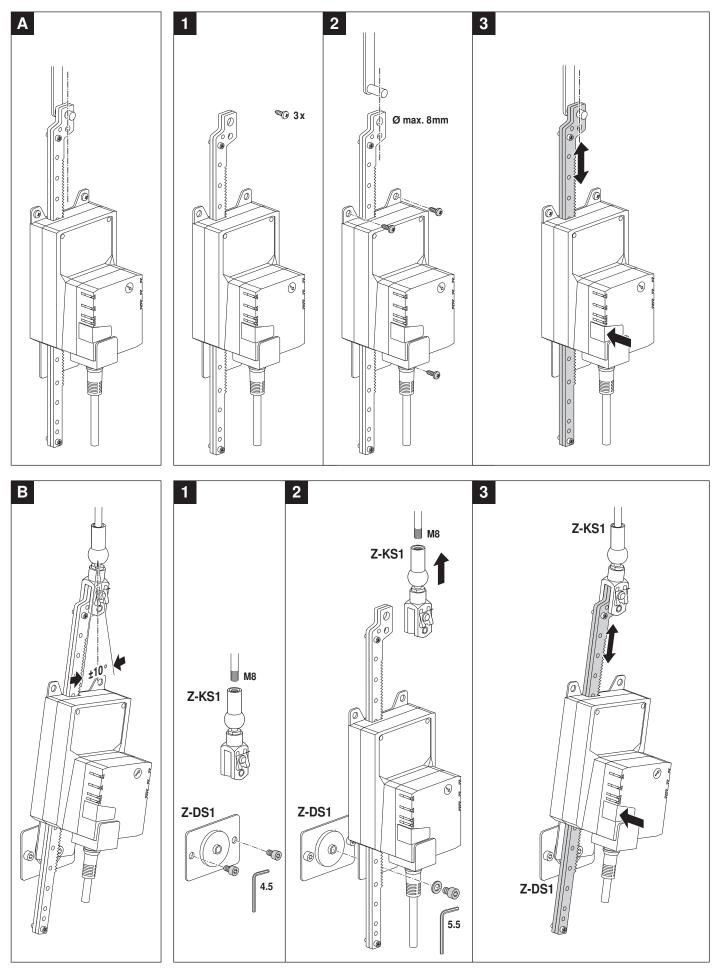




SH..A.. / SH24A-SR. / SH24A-MF.. / SH24A-MP.. / SH230ASR..

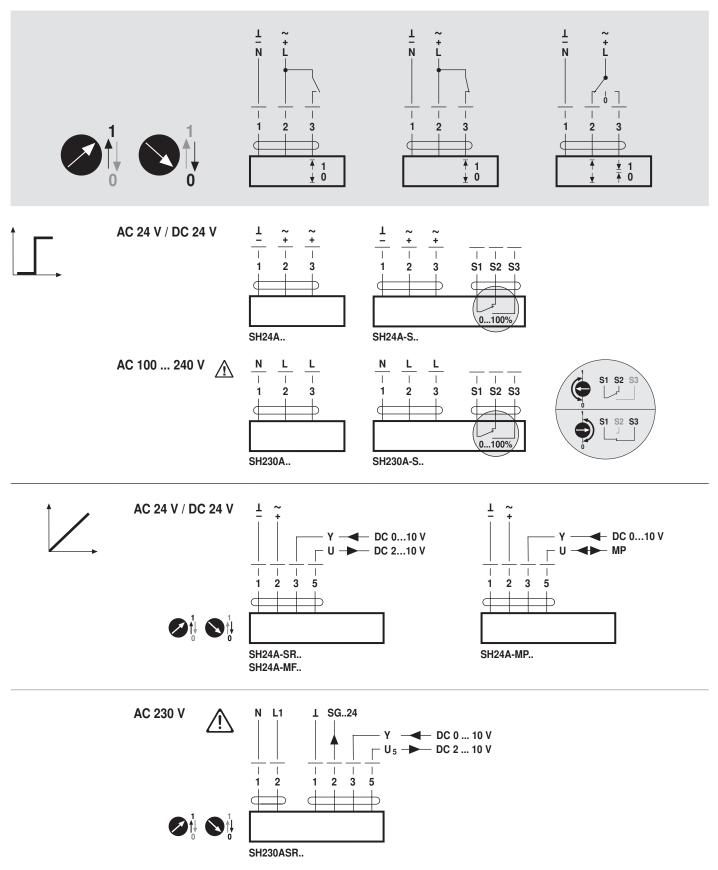

SH..A..



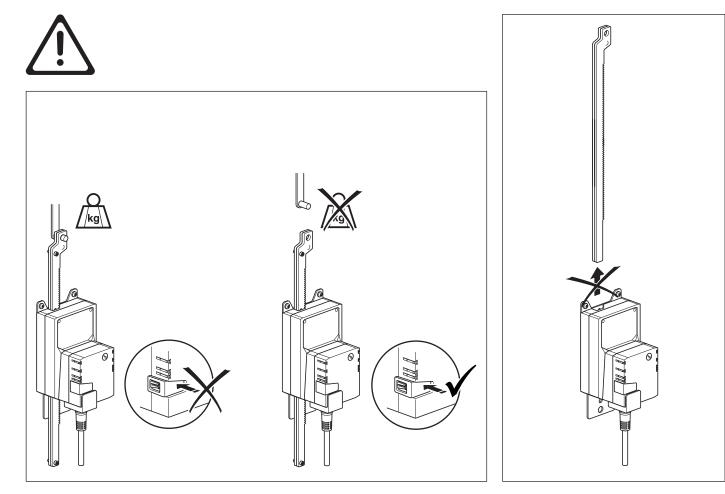

SH..A..TP

